



Heavy-Duty Commercial Pop Up Toaster

Operations Manual

BMPT001



- Read all instructions before use! • Save these instructions!
- For commercial use!



WARNING: PLEASE READ AND FOLLOW THE INSTRUCTIONS BELOW BEFORE OPERATING PRODUCT

- When using the machine, please confirm that you have read all the instructions within this manual.
- Beware of any child/children or any other persons who are near the machine before operating.
- Do not put hand near moving parts.
- Remove all obstacles, which may interfere with machine functions.
- Keep work area clean and clear of clutter.
- Do not sit or stand on machine
- Do not wear loose cloth or jewellery when operating machine as it may get caught in moving parts and cause injury
- When the machine is abnormal or broken, you should stop using and check it or have it checked by a professional.
- Disconnect from power source before performing maintenance on the machine.
- When machine is not in use, please clean and store properly.
- Do not place any electrical parts or plug/cord in water.
- The cord should be away from the heat.
- Don't hang out the cord on the desk or cabinet.
- Machine may have sharp or pointed edges, use caution when cleaning.
- This machine should only be operated by personnel who can read, understand and respect warnings and instructions regarding this machine and the manual.
- Keep this manual in a safe place for further and regular reference and ordering parts.
- Please write model serial and date of purchase of your machine in the space provided in case you will need to order parts in the future.
- Always work by security code of your country, state, province, city or committee of your work place.

Showcase Specific Warnings.

The following warnings refer to all BakeMax® Heated Showcases.


- Keep the surrounding of the show case clean of clutters and papers to avoid fire
- Keep all heated show cases on a non combustibile surface
- Keep all heated showcases out of reach of small children
- Always turn off thermostat at night or when show case is not in use
- Always allow time to cool down before cleaning or perform maintenance on showcase

Important Safe Guards

When using electrical appliances, basic safety precautions should always be taken, including the following:

- 1) Read all instructions.
- 2) Do not touch hot surfaces. Use handles or knobs.
- 3) To protect against risk of electrical hazards, do not immerse cord, plug, or any part of the commercial toaster in water or near liquid.
- 4) Close supervision is necessary when any appliance is used by or near children.
- 5) Unplug from outlet when not in use and before cleaning. Allow unit to cool before cleaning or handling
- 6) Do not operate any appliance with a damaged cord or plug or after the appliance has been dropped or damaged in any way or if it is not operating properly. Return the toaster to the nearest authorized service facility for examination, repair, or adjustment.
- 7) The use of attachments not recommended or sold by the manufacture may cause injury.
- 8) Do not use outdoors.
- 9) Do not let cord hang over edge of table or countertop, or touch hot surfaces.
- 10) Do not place on or near a hot gas or electric burner or in a heated oven.
- 11) Do not use this toaster for other than its intended use.
- 12) A FIRE MAY OCCUR IF THE TOASTER IS COVERED OR TOUCHING FLAMMABLE MATERIALS SUCH AS DRAPERIES OR WALLS WHEN IN OPERATION. DO NOT OPERATE UNDER WALL CABINETS.
- 13) Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electrical shock.
- 14) Do not attempt to dislodge food when toaster is plugged into electrical outlet.
- 15) To avoid possibility of fire, do not leave toaster unattended during use.
- 16) Put this list in a safe place - do not discard.
- 17) Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliances.

BMPT001

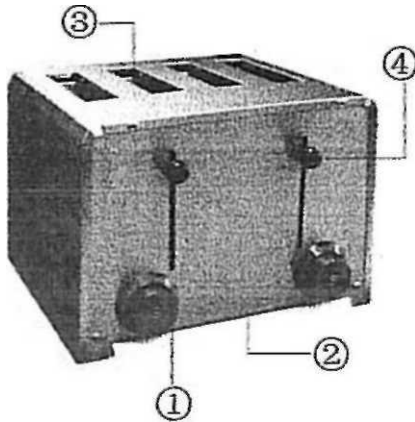

1. Electronic Browning Control
2. Slide-out Crumb Tray
3. Toaster Slot
4. Carriage Control Life Lever

Specification

Model: BMPT001

Volts: 110 Frequency(Hz): 60

Amps: 16

Grounding Instructions

For your protection, the toaster is supplied with a molded 3-prong grounding-type plug and should be used in combination with a properly grounding-type receptacle. Use of any other voltage or altering of the plug or cord may damage the unit, will void warranty and may cause injury.

Operation

1. Put toaster on counter or flat, dry surface near electrical outlet.
2. Place bread in all the slots, set both browning controls and push down the carriage control levers. The toasted bread will automatically rise when the bread cycle is complete. NOTE: If you want to change the preset time after pushing down the carriage control levers: turn the knob to the desirable time (position).
3. To stop boasting mid-cycle, just lift up the carriage control lever.

CAUTION: The removable crum tray must be completely inserted before operating the toaster. If the tray is removed for cleaning, ensure that it is replaced before using toaster. Crumb tray is dishwasher safe.

Care and Cleaning

Let toaster cool before any cleaning operation.

- 1. To clean outer surface: let toaster cool. Unplug power cord. Wipe down exterior with damp cloth. Prevent liquid from running into toaster slots. Before using allow toasters' outer surface to dry.**
- 2. To clean crumb tray: remove the crumb tray and discard crumbs. Wipe crumb tray clean and replace in toaster. Never operate the toaster without the crumb tray in place. Crumb tray is dishwasher safe.**
- 3. To remove any pieces of bread remaining in the toaster, unplug toaster, turn the toaster upside down and gently shake. Never insert any metal or sharp instrument into the toaster slots. This could damage the toaster and present a potential safety hazard.**

Warranty



- SPECIAL TERMS & CONDITIONS**
- BakeMax® reserves the right to make improvements or equipment specification changes without prior notice.
 - Set up and installation is client's responsibility.
 - Failure to follow all instructions in operations manual, properly install, maintain equipment, follow capacity charts, or electrical information may void warranty.

Titan Ventures International Inc.
PO Box 23083, Moncton NB, E1A 6S8
Toll Free: 1-800-565-BAKE
Telephone: 1-506-858-8990
Fax: 1-506-859-6929

- One year Parts and Labor limited warranty.
- Warranty begins at date of installation, delays of installation and extended warranty must be approved.
- All equipment must be properly installed and connected by qualified professionals if not a standard Plug 'N Go* operation.
- All equipment must be used within tolerance limits of machine.
- Any abuse of equipment or improper use of machine will void the warranty.
- Accessories or attachments have 90 day warranty to be repaired or replaced.
- Repairs include Parts and Labor only, excluded are the following:
 - Electrical components such as fuses, bulbs, elements switches are not covered by this warranty.
 - Overtime labor rates.
 - Expedited freight for parts.
 - Travel charges.
- All defective parts must be returned to BakeMax® for credit.
- BakeMax® is not responsible for production downtime or product losses.
- Repairs must be pre-authorized by BakeMax® prior to work commencing.
- Emergency service 24/7 at 1-800-565-2253

*Plug 'N Go operation requires machine be properly connected to proper wall outlet.

Think Quality, Value, Service.....Think

BakeMax®

Toll Free: 1-800-565-BAKE Web Site: www.bakemax.com E-mail: sales@bakemax.com